


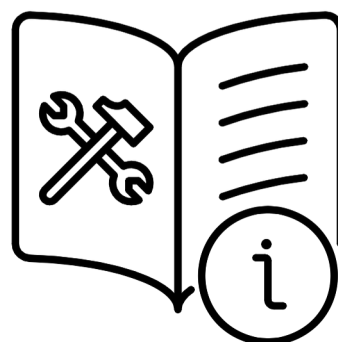
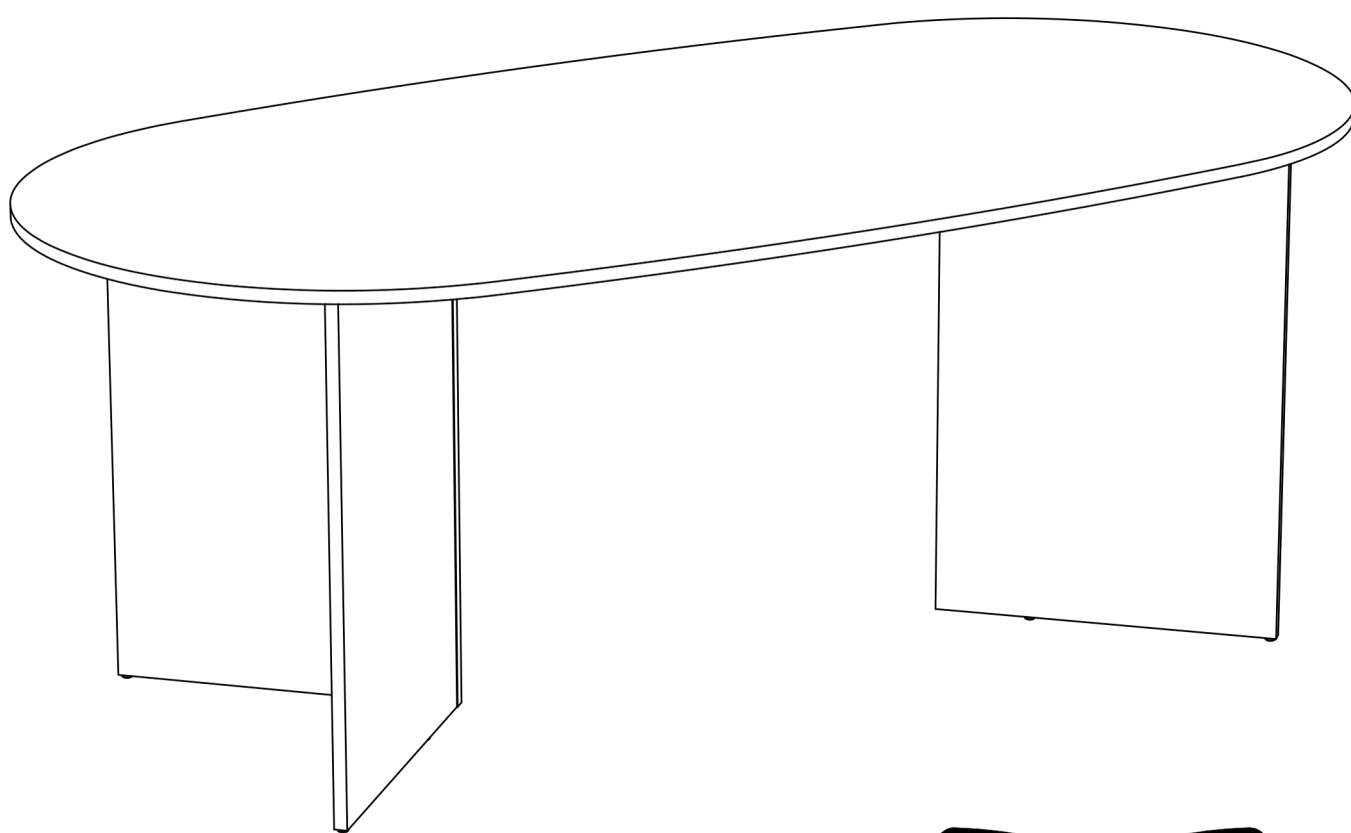


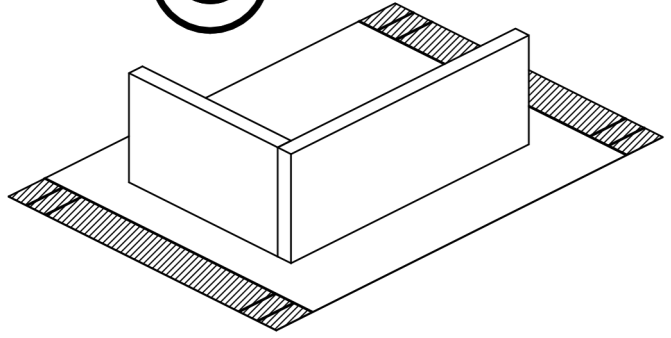


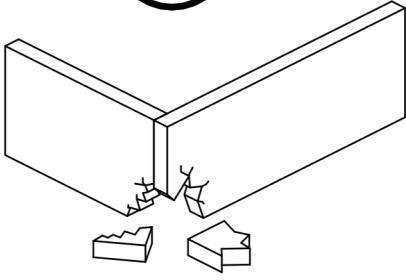







1-2 hr


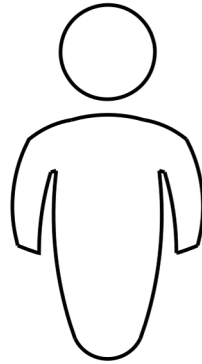



x2

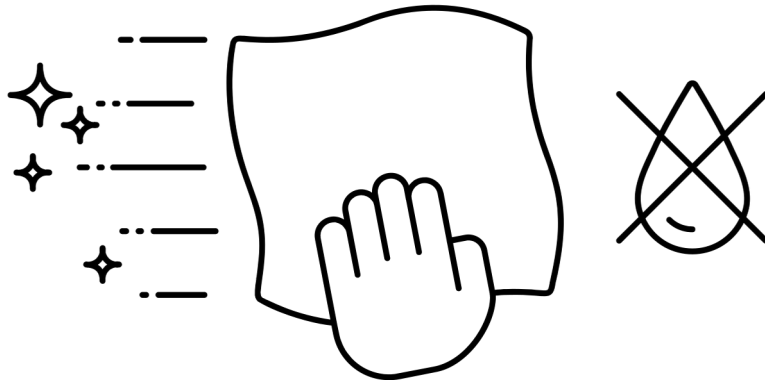

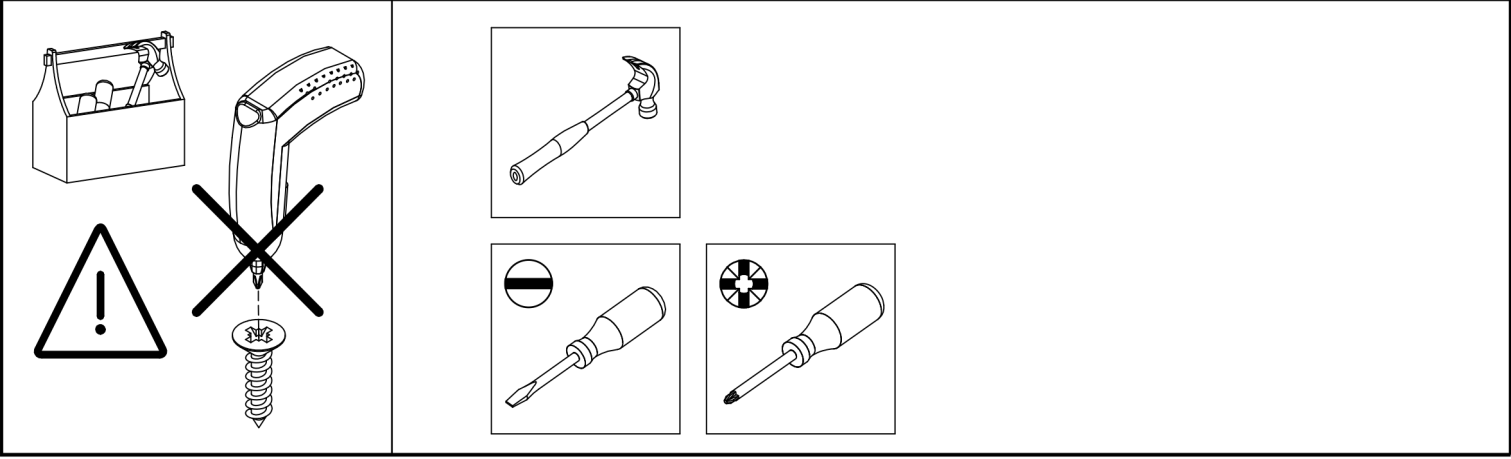


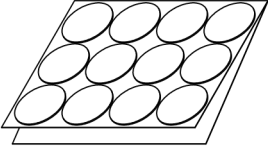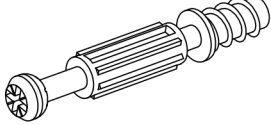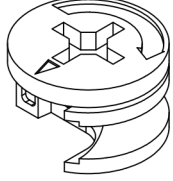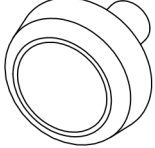0110901 x1  Ø0.87x0.02" Ø22x0,5 mm	0120203 x12  Ø0.2x1.18" Ø5x30 mm	0131513 x24  Ø0.30x1.77/1.34" Ø7,5x45/34 mm	0131687 x24  Ø0.59x0.37" Ø15x9,5 mm	0163015 x8  Ø0.59x0.19" Ø15x4,8 mm
--	---	--	--	---

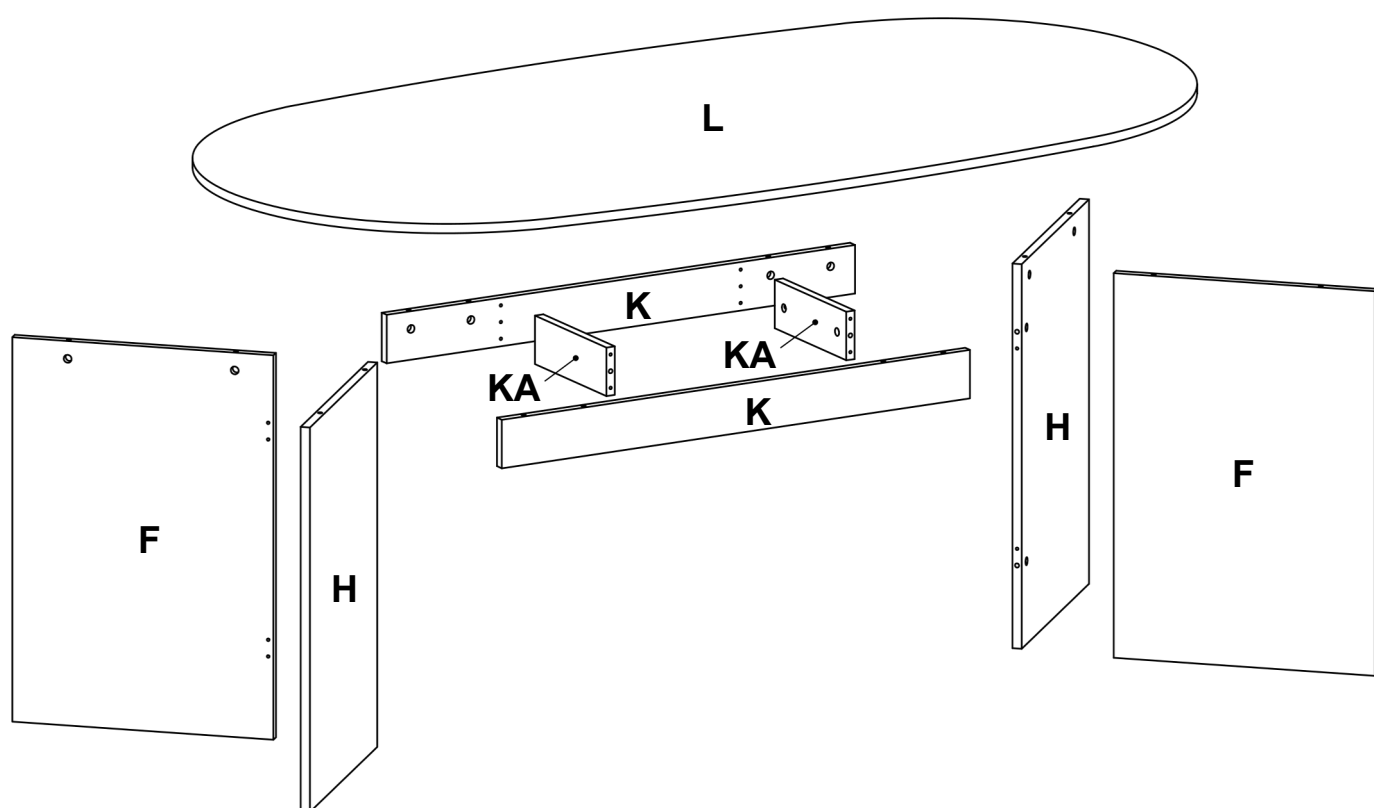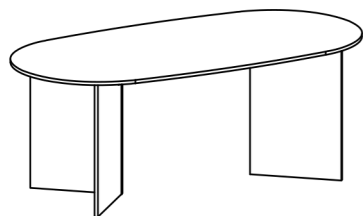


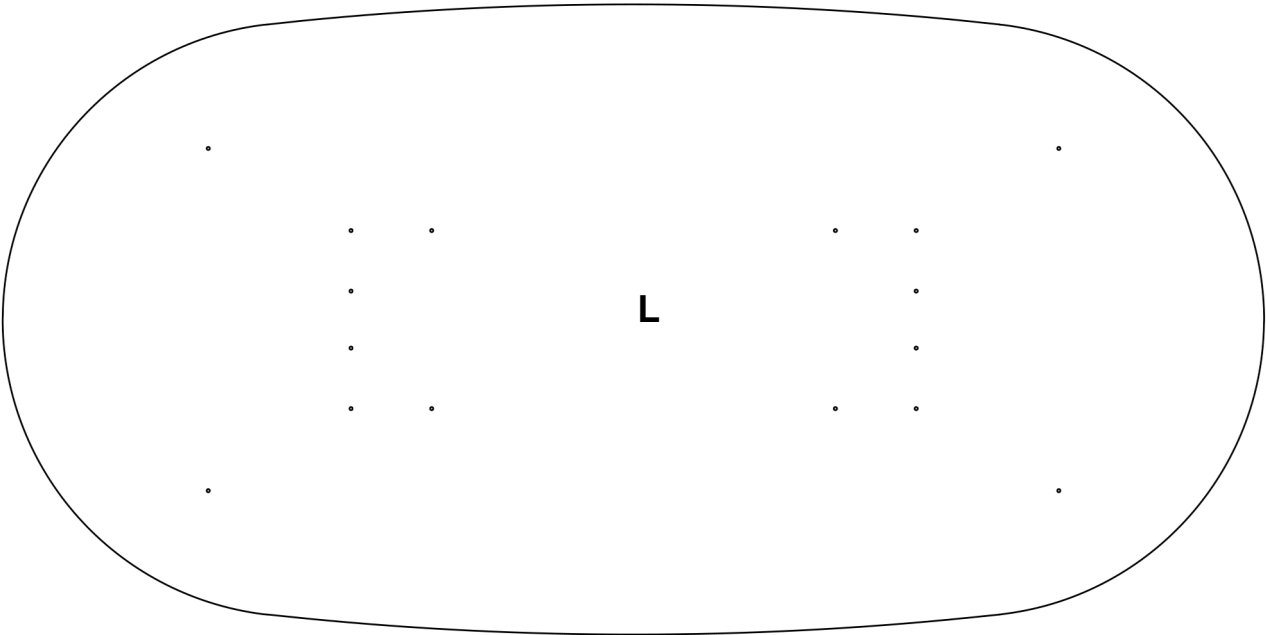


2000x1000x18mm

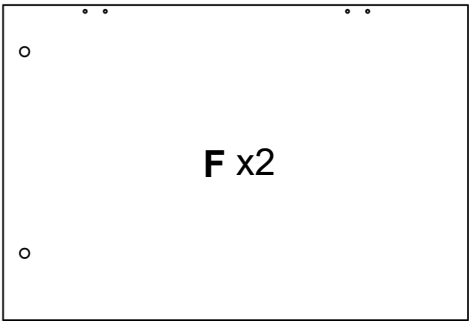

737x500x18mm

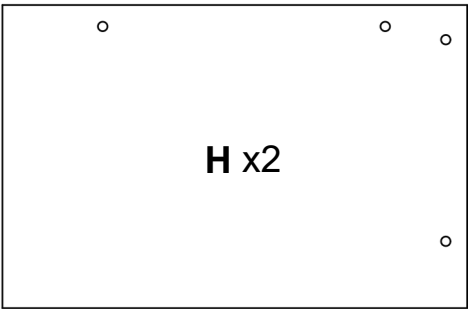

737x481x18mm



1000x93x18mm




264,5x93x18mm

1

0120203

x8




Ø0.2x1.18"

Ø5x30 mm



0131513

x4




Ø0.30x1.77/1.34"

Ø7,5x45/34 mm

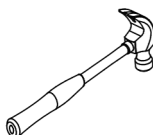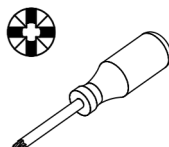




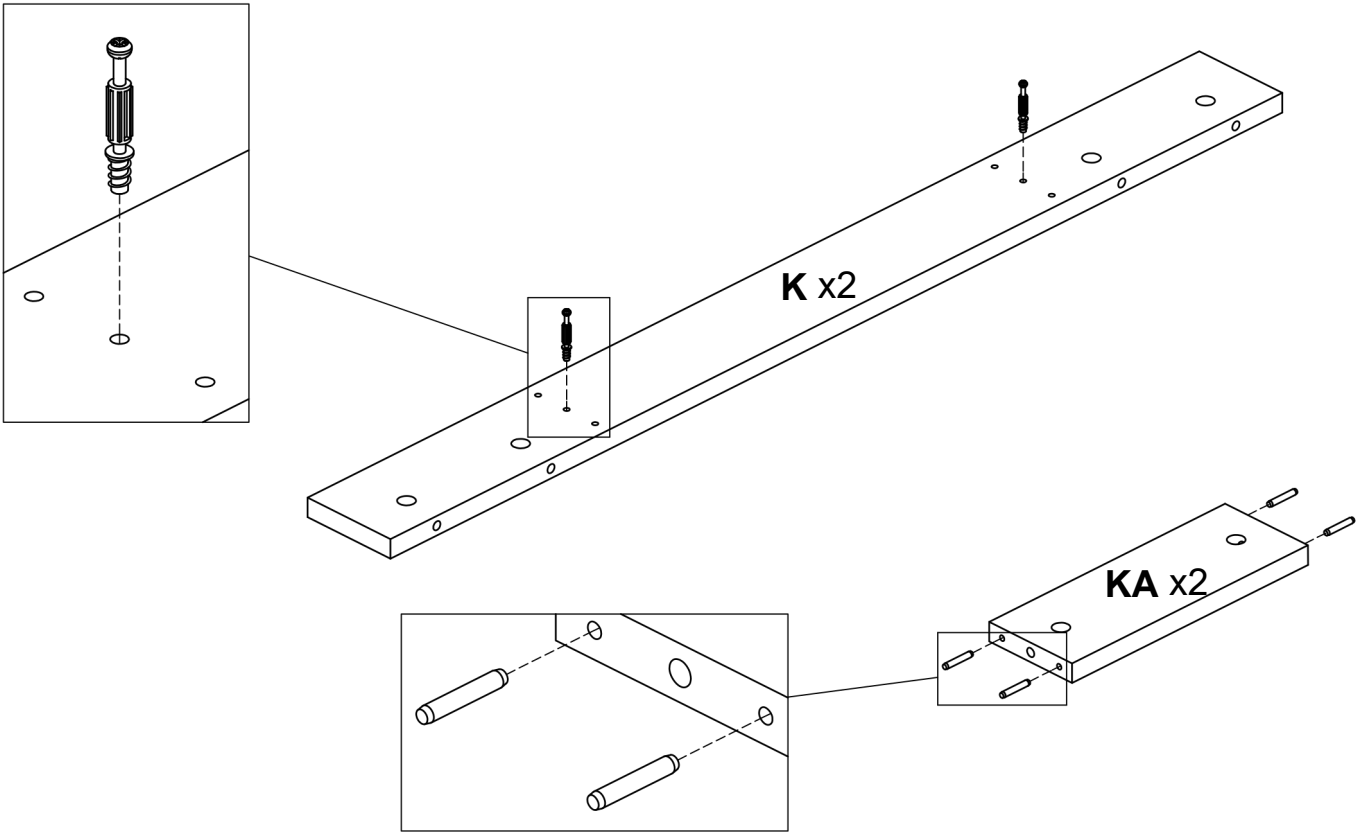

2


0131687

x4



Ø0.59x0.37"

Ø15x9,5 mm

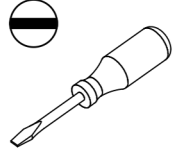

1

2

3




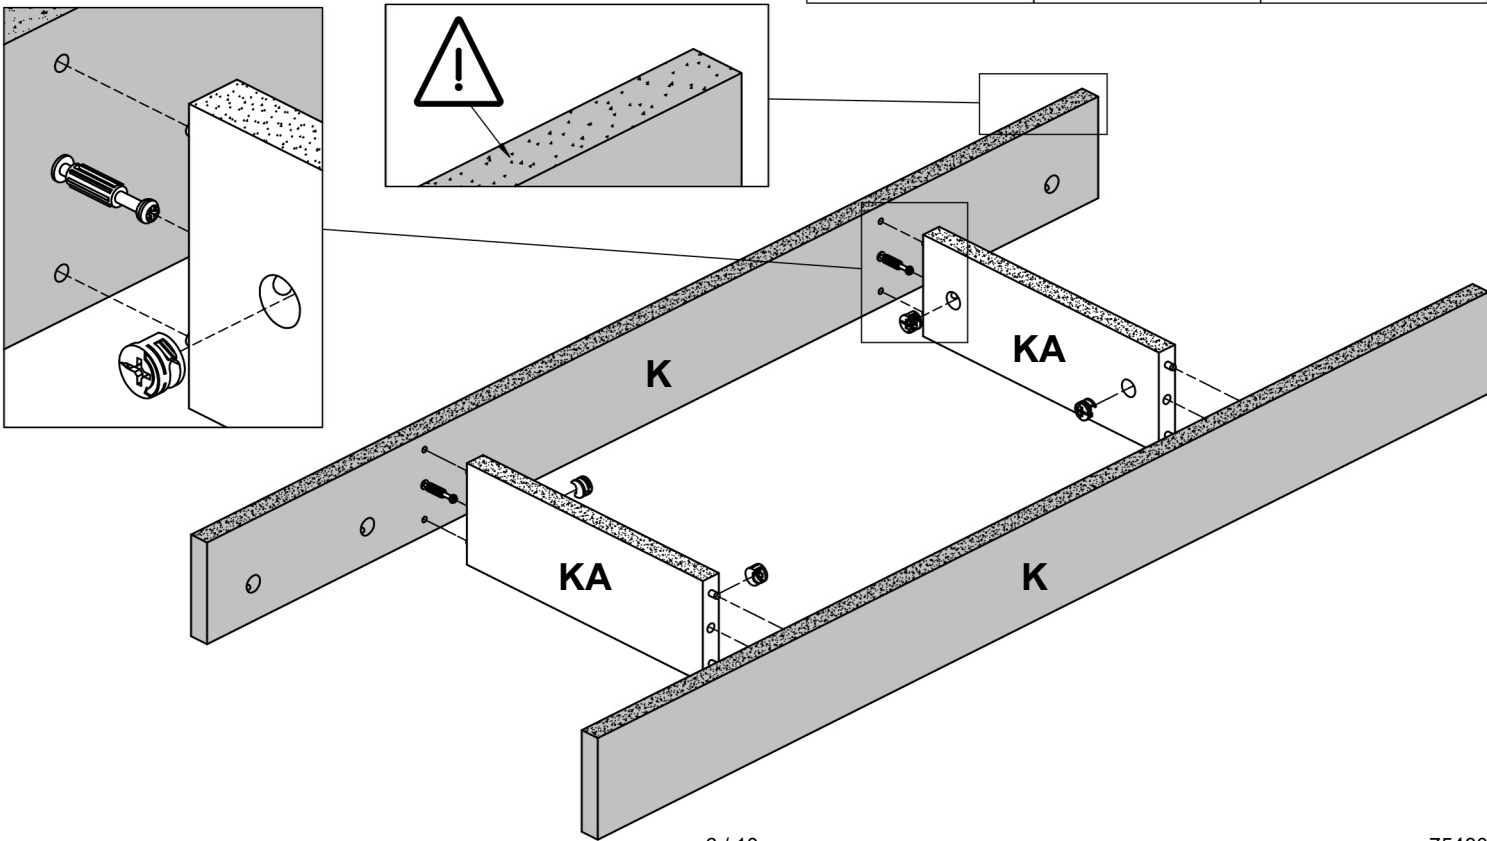



Diagram illustrating the installation of washers and the final assembly of plates **K** and brackets **KA**. The diagram shows two plates **K** being joined by two brackets **KA**. Washers are used to secure the brackets to the plates. A callout shows a close-up of a washer being installed on a plate **K**. A warning icon indicates that the assembly should be done on a flat surface. A lock icon indicates that the assembly is secure.


6 / 10

75480

3	0120203 x4 Ø0.2x1.18" Ø5x30 mm	0131513 x4 Ø0.30x1.77/1.34" Ø7,5x45/34 mm	0163015 x8 Ø0.59x0.19" Ø15x4,8 mm		
---	---	--	--	--	---

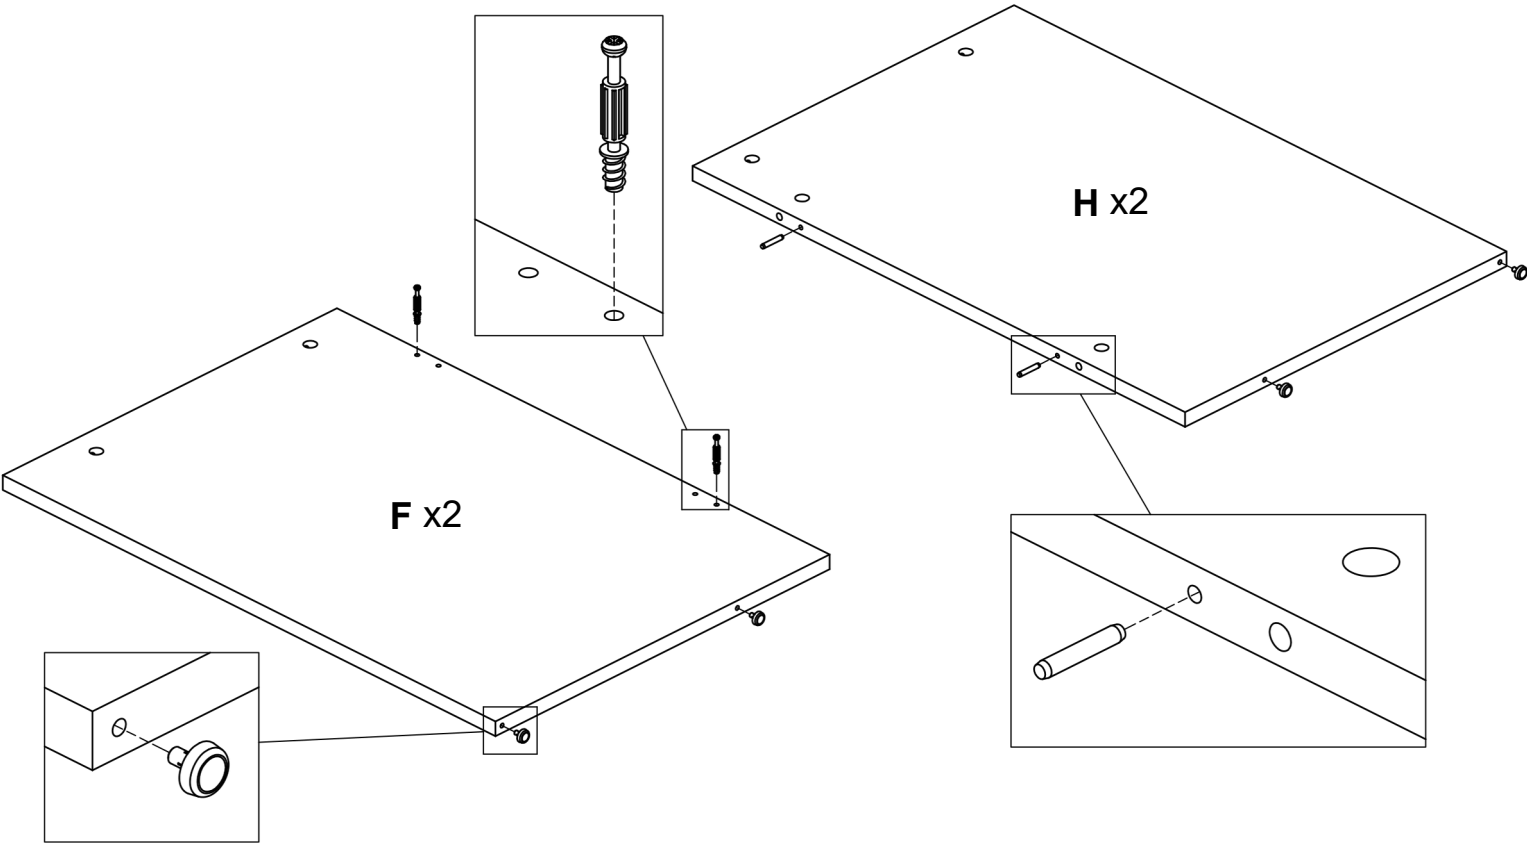


4	0131687 x4 Ø0.59x0.37" Ø15x9,5 mm	
---	---	---

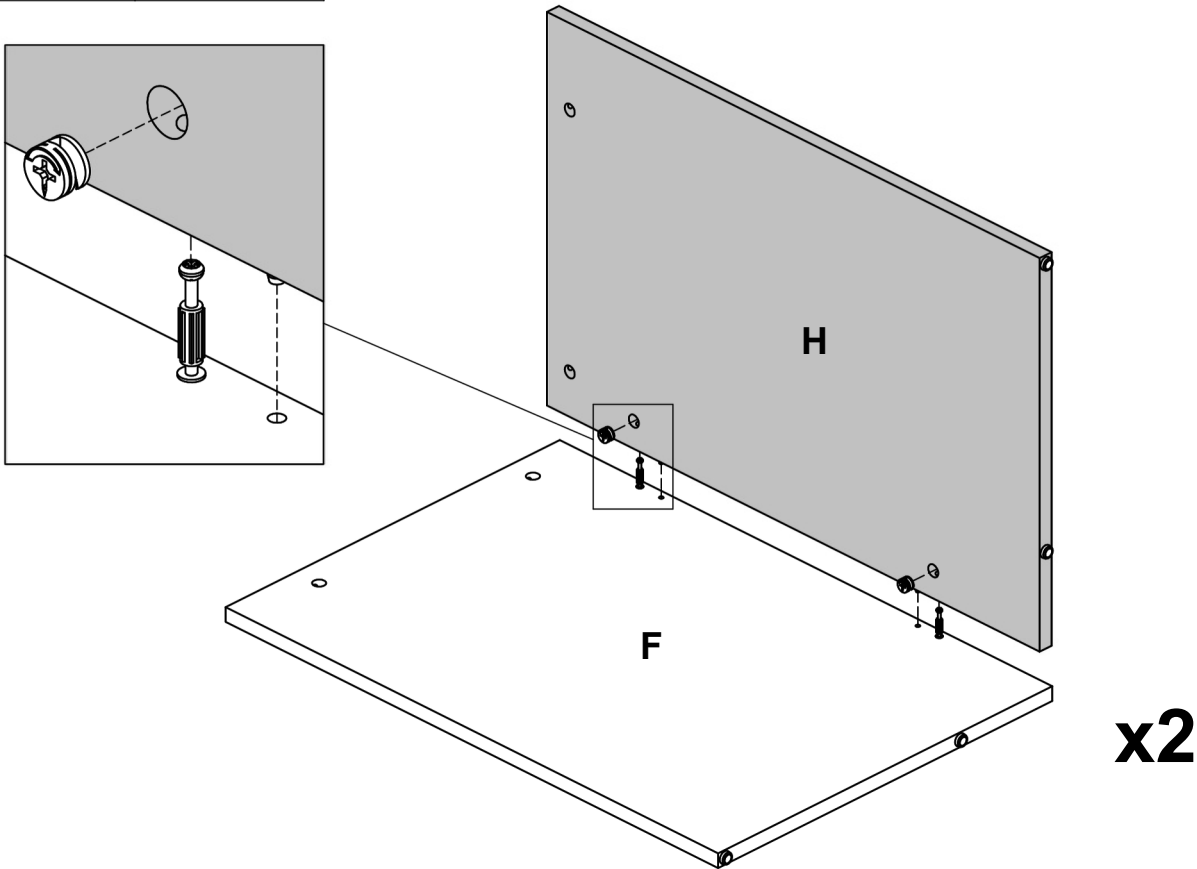




5

0131513

x16




Ø0.30x1.77/1.34"
Ø7,5x45/34 mm

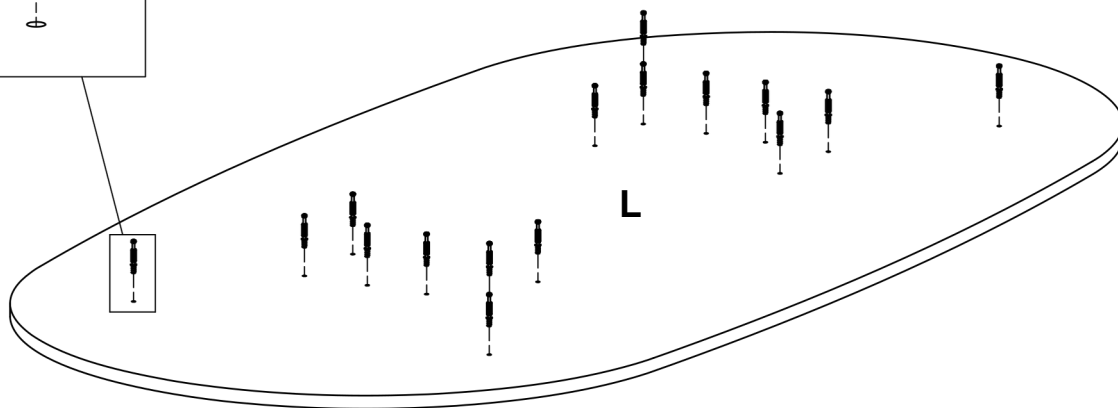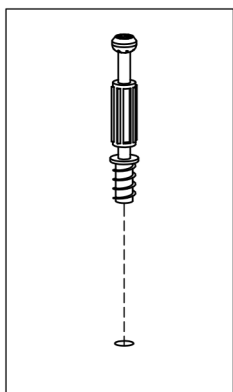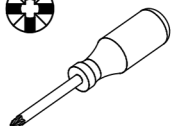




6

0131687

x8



Ø0.59x0.37"
Ø15x9,5 mm

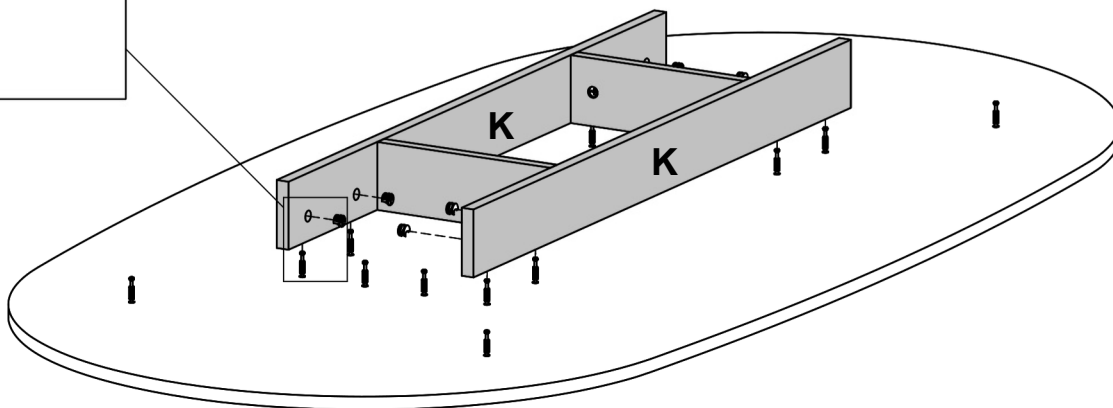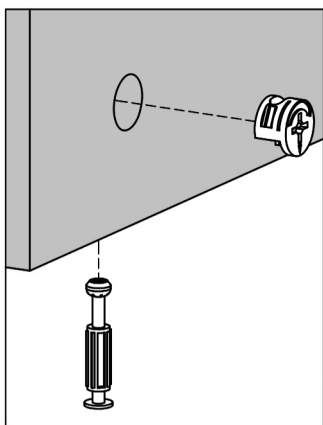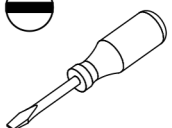


7

0131687

x8

Ø0.59x0.37"

Ø15x9,5 mm

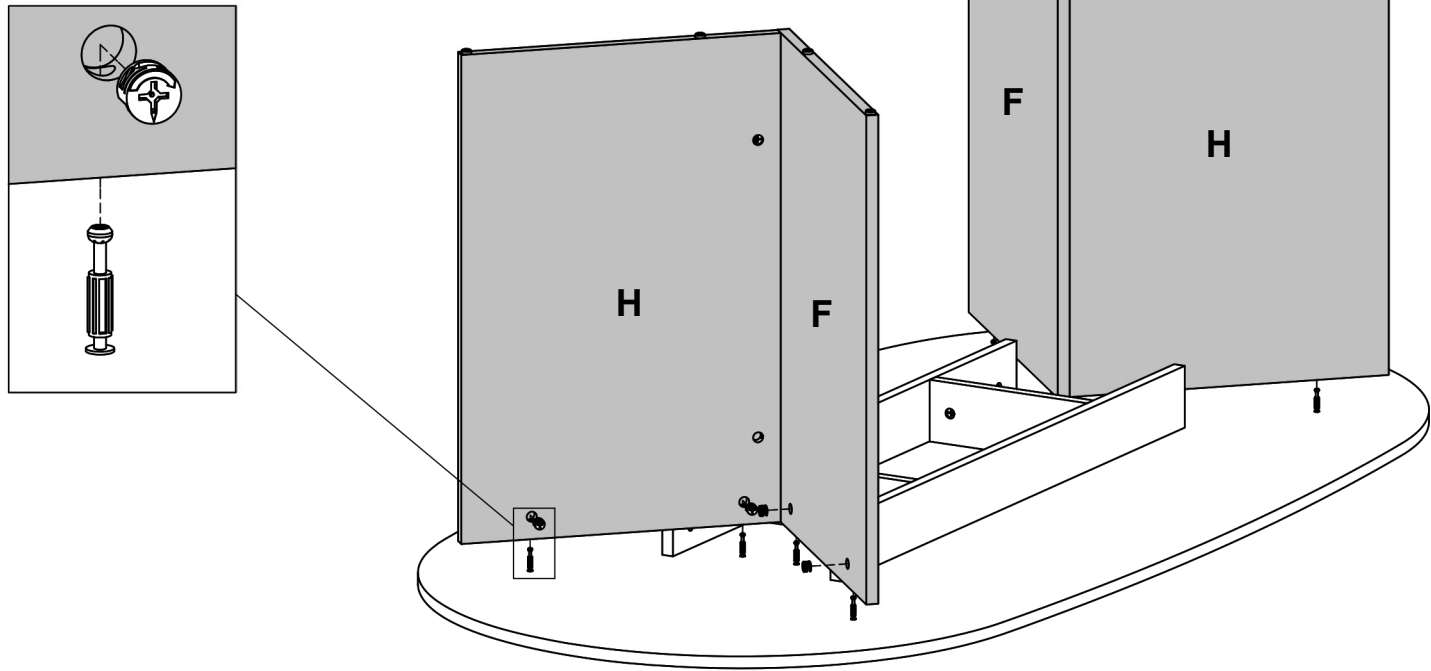


8



0110901

x24

Ø0.87x0.02"

Ø22x0,5 mm

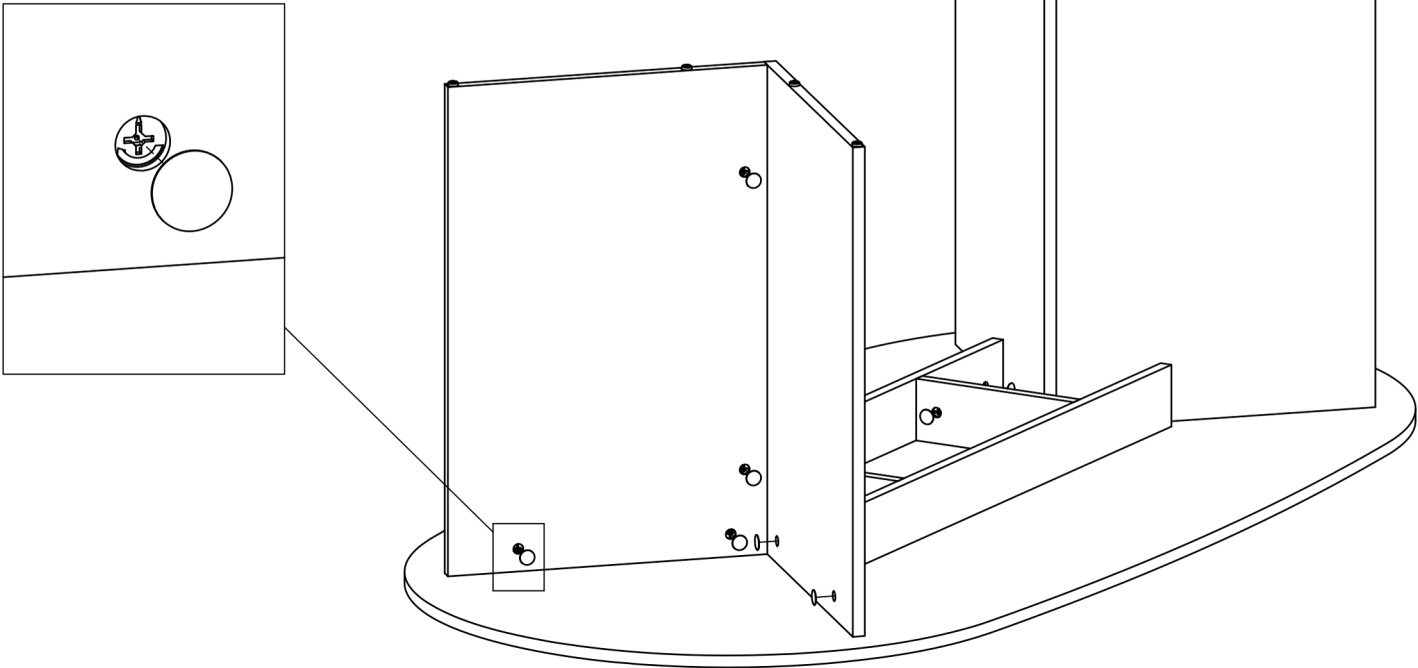

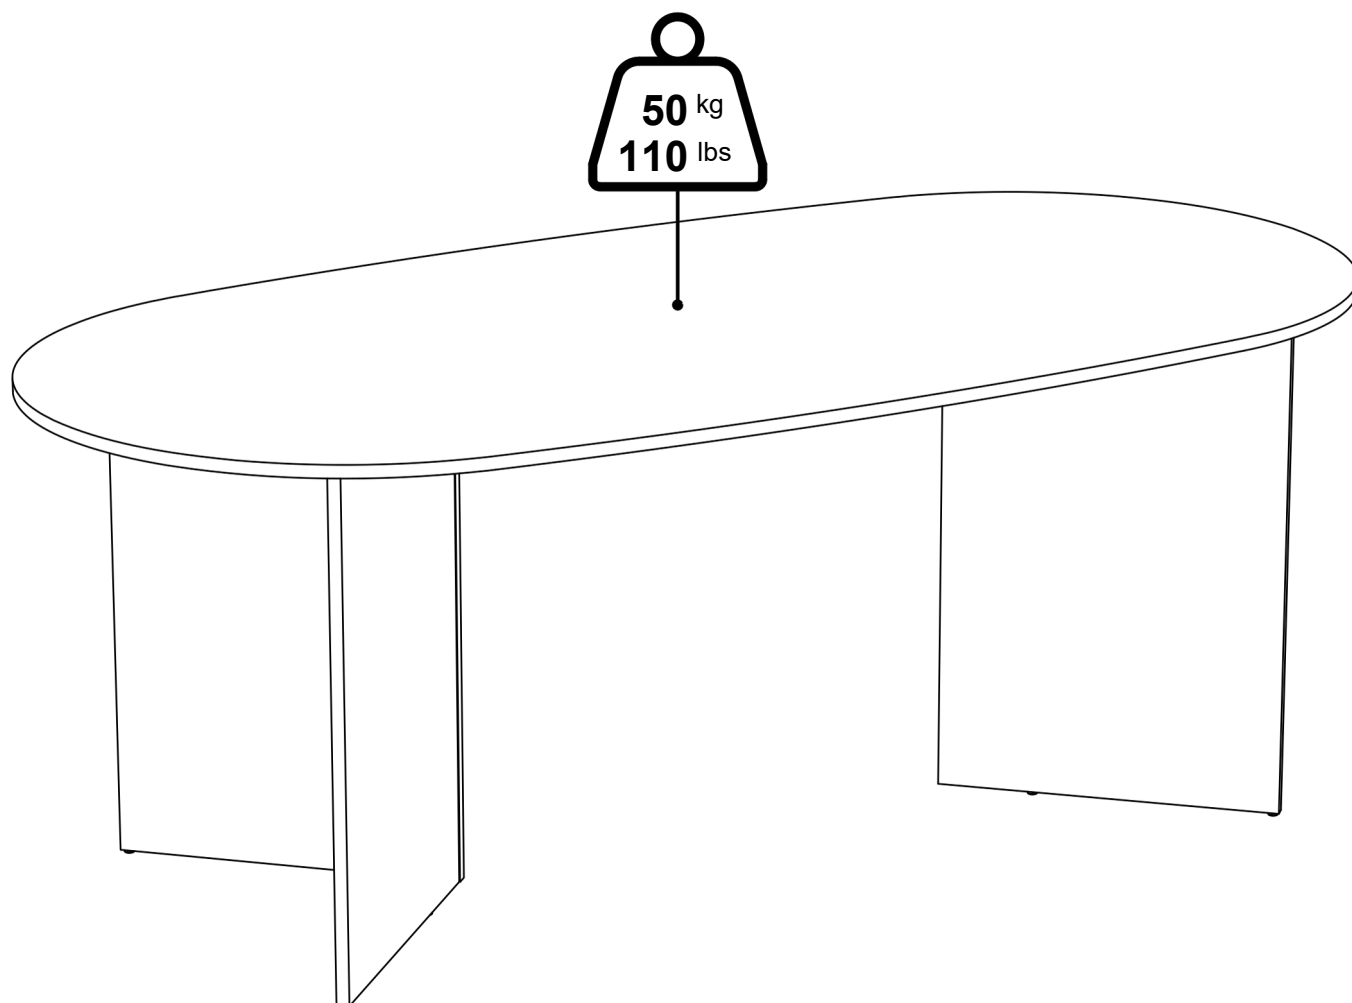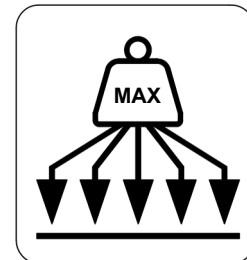

<https://quefairedemesdechets.fr>